


# Operating Instructions

## MULTI-PLAY COMPACT DISC PLAYER


PD-M502/PD-M552  
PD-M602/PD-M702

COMPACT  
disc  
DIGITAL AUDIO


PD-M502

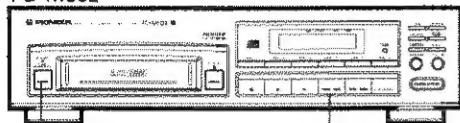


PD-M552

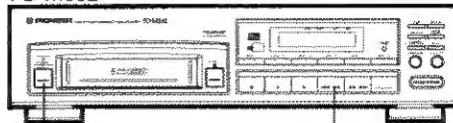

PD-M602

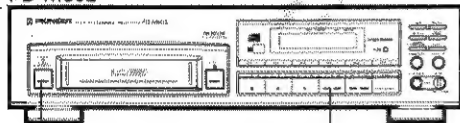

PD-M702

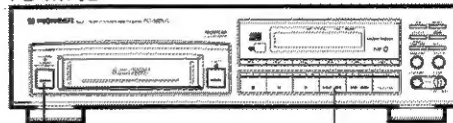

### DEMO MODE

Demo mode allows you to see variations of the display. To enter the demo mode, press the POWER switch and then **⏮ ⏭** button with-

in 1 second without inserting the magazine. To exit demo mode, insert the magazine or press any button.

Thank you for buying this PIONEER product.

Please read through these operating instructions so you will know how to operate your model properly. After you have finished reading the instructions, put them away in a safe place for future reference.

In some countries or regions, the shape of the power plug and power outlet may sometimes differ from that shown in the explanatory drawings. However, the method of connecting and operating the unit is the same.

**WARNING:** TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

### IMPORTANT NOTICE [For U.S. and Canadian models]

The serial number for this equipment is located on the rear panel. Please write this serial number on your enclosed warranty card and keep it in a secure area. This is for your security.

### [For Canadian model with the polarized plug]

**CAUTION:** TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

### [Pour le modèle canadien avec la fiche polarisée]

**ATTENTION:** POUR PREVENIR LES CHOCs ELECTRIQUES NE PAS UTILISER CETTE FICHE POLARISEE AVEC UN PROLONGATEUR, UNE PRISE DE COURANT OU UNE AUTRE SORTIE DE COURANT, SAUF SI LES LAMES PEUVENT ETRE INSEREES A FOND SANS EN LAISSER AUCUNE PARTIE A DECOUVERT.


### LINE VOLTAGE SELECTOR SWITCH

Only multi-voltage models are provided with this switch. U.S., Canadian, European, U.K., and Australian models are not provided with this switch.

Mains voltages in Saudi Arabia are 127V and 220V only.

The line voltage selector switch is located on the rear panel of this player. Before your player is shipped from the factory, the switch is set to the power requirements of the player's destination. Check that it is set properly before plugging the power cord into the outlet. If the voltage is not properly set or if you move to an area where the voltage requirements differ, adjust the selector switch as follows:

- Be sure to disconnect the power cord from its outlet before making this adjustment.
- Use a medium-sized (flat blade) screwdriver. Insert the tip of the screwdriver into the groove of the selector switch and turn it so that the power voltage marking of your area points to the arrow.

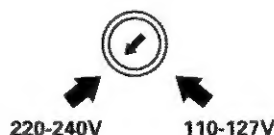

**CAUTION:** Be sure to use the shielded cables when connecting this equipment to other devices.

"This product complies with the Radio Interference requirements of the EC (European Community) Directive 87/308/EEC."

**PIONEER**  
The Art of Entertainment

## IMPORTANT 1



The lightning flash with arrowhead, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN

**CAUTION:**  
**TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## IMPORTANT 2

### WARNING: THIS APPLIANCE MUST BE EARTHED

The wires in this mains lead are coloured in accordance with the following code:

green and yellow	earth
blue	neutral
brown	live

If the plug provided is unsuitable for your socket outlets, the plug must be cut off and a suitable plug fitted. The cut-off plug should be disposed of and must not be inserted into any 13 amp socket as this can result in electric shock. The plug or adaptor or the distribution panel should be provided with 13 amp fuse. As the colours of the wires in the mains lead of this appliance may not correspond with coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured green and yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol  $\perp$  or coloured green, or green and yellow.  
The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.  
The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

#### NOTE

After replacing or changing a fuse, the fuse cover in the plug must be replaced with a fuse cover which corresponds to the colour of the insert in the base of the plug or the word that is embossed on the base of the plug, and the appliance must not be used without a fuse cover. If lost replacement fuse covers can be obtained from your dealer.

This appliance is rated at 13 amps.  
Only 13 amp fuses approved to B.S. 1362 A.S.T.A. should be used.

# SAFETY INSTRUCTIONS

**READ INSTRUCTIONS** — All the safety and operating instructions should be read before the appliance is operated.

**RETAIN INSTRUCTIONS** — The safety and operating instructions should be retained for future reference.

**HEED WARNING** — All warnings on the appliance and in the operating instructions should be adhered to.

**FOLLOW INSTRUCTIONS** — All operating and use instructions should be followed.

**WATER AND MOISTURE** — The appliance should not be used near water — for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc.

**LOCATION** — The appliance should be installed in a stable location.

**WALL OR CEILING MOUNTING** — The appliance should not be mounted to a wall or ceiling.

**VENTILATION** — The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.

**HEAT** — The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.

**POWER SOURCES** — The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.

**POWER-CORD PROTECTION** — Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

**POLARIZATION** — If your purchased product is provided with a polarized power plug, please read the following instructions. This product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

**CLEANING** — The appliance should be cleaned only with a polishing cloth or a soft dry cloth. Never clean with furniture wax, benzene, insecticides or other volatile liquids since they may corrode the cabinet.

**POWER LINES** — An outdoor antenna should be located away from power lines.

**NONUSE PERIODS** — The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.

**OBJECT AND LIQUID ENTRY** — Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.

**DAMAGE REQUIRING SERVICE** — The appliance should be serviced by a Pioneer authorized service center or qualified service personnel when:

- The power-supply cord or the plug has been damaged.
- Objects have fallen, or liquid has been spilled into the appliance.
- The appliance has been exposed to rain.
- The appliance does not appear to operate normally or exhibits a marked change in performance.
- The appliance has been dropped or the enclosure damaged.

**SERVICING** — The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

**OUTDOOR ANTENNA GROUNDING** — If an outside antenna is connected to the antenna terminal, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges.

In the U.S.A. section 810 of the National Electrical Code, ANSI/NFPA 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Fig. A.

**CART** — An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.



NEC — NATIONAL ELECTRIC CODE

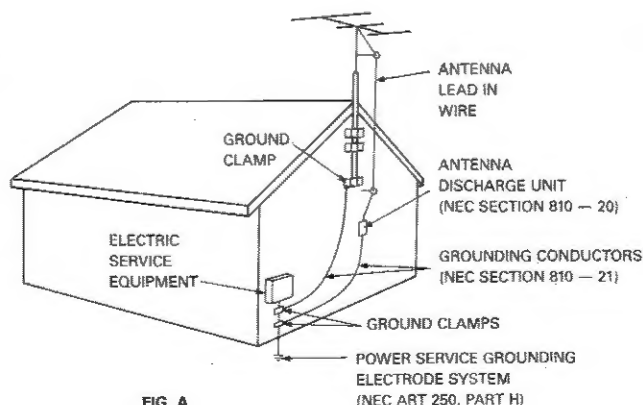


FIG. A

## [FOR EUROPEAN AND U.K. MODELS]

### CAUTION

This product contains a laser diode of higher class than 1. To ensure continued safety, do not remove any covers or attempt to gain access to the inside of the product.

Refer all servicing to qualified personnel.

The following caution label appears on your player.

Location: rear of the player

CLASS 1  
LASER PRODUCT

VRW-328

## [FOR U.S. MODEL]

### CAUTION

- Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
- The use of optical instruments with this product will increase eye hazard.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Information to User

Alteration or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.



## Dear Customer:

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion—and, most importantly, without affecting your sensitive hearing.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

### To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

### Once you have established a comfortable sound level:

- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

## We Want You Listening For A Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise. This list of sound levels is included for your protection.

### Decibel

Level	Example
30	Quiet library, soft whispers
40	Living room, refrigerator, bedroom away from traffic
50	Light traffic, normal conversation, quiet office
60	Air conditioner at 20 feet, sewing machine
70	Vacuum cleaner, hair dryer, noisy restaurant
80	Average city traffic, garbage disposals, alarm clock at two feet.

## THE FOLLOWING NOISES CAN BE DANGEROUS UNDER CONSTANT EXPOSURE

90	Subway, motorcycle, truck traffic, lawn mower
100	Garbage truck, chain saw, pneumatic drill
120	Rock band concert in front of speakers, thunderclap
140	Gunshot blast, jet plane
180	Rocket launching pad


Information courtesy of the Deafness Research Foundation.



## CONTENTS

CONFIRM SUPPLIED ACCESSORIES .....	4
PUT BATTERIES INTO THE REMOTE CONTROL UNIT .....	4
CAUTIONS REGARDING HANDLING .....	5
BEFORE OPERATING THE PLAYER .....	6
CONNECTIONS .....	7
NAMES AND FUNCTIONS OF PARTS .....	8
BASIC OPERATION .....	9
VARIOUS OPERATIONS .....	11
TO PLAY ONLY DESIRED TRACKS/DISCS .....	13
CONVENIENT OPERATION FOR RECORDING .....	16
TROUBLESHOOTING .....	19
SPECIFICATIONS .....	Back cover

## CONFIRM SUPPLIED ACCESSORIES

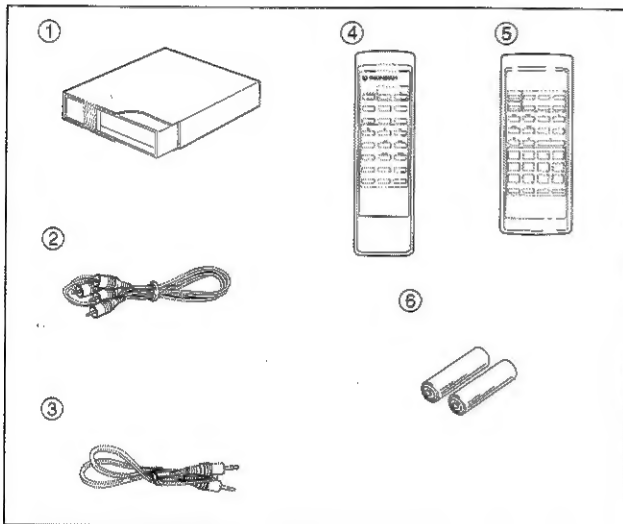

- ① 6-Compact Disc Magazine x 1  
(Called 6-disc magazine in the explanatory text.)

**NOTE:**

The supplied 6-disc magazine is for 12 cm (5-inch) discs only.

- ② Output cord x 1  
③ Control cord x 1 (PD-M502/PD-M552: all models, PD-M602/PD-M702: U.S. and Canadian models only)  
④ Remote control unit x 1 (PD-M552/PD-M602 only)  
⑤ Remote control unit x 1 (PD-M702 only)  
⑥ AAA/R03 dry cell batteries x 2 (Except for PD-M502)


### [For Canadian model]

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

THE POWER SWITCH IS SECONDARY CONNECTED AND THEREFORE DOES NOT SEPARATE THE UNIT FROM MAINS POWER IN STANDBY POSITION.

## PUT BATTERIES INTO THE REMOTE CONTROL UNIT (Except for PD-M502)

PD-M552/PD-M602

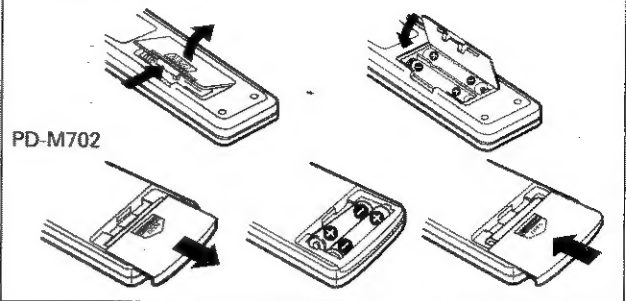

Open the lid of the battery compartment on the rear of the remote control unit, and insert the batteries (size "AAA" (IEC R03)), taking care to align the ⊕ and ⊖ polarities correctly.

**NOTE:**

- In order to prevent battery leakage, remove the batteries when not using the remote control unit for an extended period (one month or more). If leakage occurs, carefully wipe away any battery fluid inside the compartment, and replace the batteries with new ones.
- Do not allow books or other objects to rest on top of the remote control unit, since the buttons may be depressed, causing faster exhaustion of the batteries.


Incorrect use of batteries may cause leakage or rupture.

Always be sure to follow these guidelines:

- Always insert batteries into the battery compartment correctly matching the positive ⊕ and negative ⊖ polarities, as shown by the display inside the compartment.
- Never mix new and used batteries.
- Batteries of the same size may have different voltages, depending on brand. Do not mix different brands of batteries.

## REMOTE CONTROL OPERATIONS (Except for PD-M502)

When operating the remote control unit, point the unit's infrared signal transmitter at the remote control receiver (REMOTE SENSOR) on the front panel of the player. The remote control unit can be used within a range of about 7 meters (23 feet) from the remote sensor, and within angles of up to about 30 degrees.

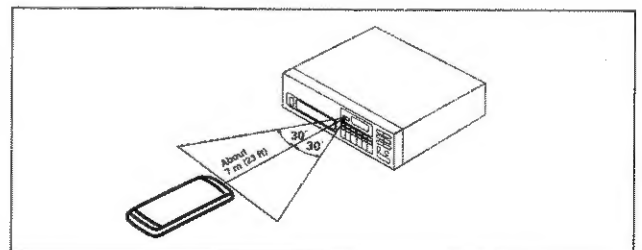

**NOTE:**

If the remote control sensor window is in a position where it receives strong light such as sunlight or fluorescent light, control may not be possible.

**NOTE for PD-M502:**

Operate the PD-M502 using the remote control unit which accompanies the amplifier. (See page 7.)

## CAUTIONS REGARDING HANDLING

### LOCATION

Install the player in a well ventilated location where it will not be exposed to high temperature or humidity.

Do not install the player in a location which is exposed to direct rays of the sun, or near stoves or radiators. Excessive heat can adversely affect the cabinet and internal components. Also, installation of the player in a damp or dusty environment may result in malfunction or accident.

### PRECAUTIONS REGARDING INSTALLATION

- Avoid placing the player on heat-generating sources such as amplifiers.
- Install this compact disc player as far as possible from tuners and TV sets. Noise may be particularly noticeable when an indoor antenna is used. In such cases, make use of an outdoor antenna, or turn off power to the compact disc player.
- Please place this unit on a level surface.

### CLEANING THE PLAYER AND THE MAGAZINE

To clean the PLAYER and the MAGAZINE, wipe with a soft, dry cloth. For stubborn dirt, wet a soft cloth with a mild detergent solution made by diluting one part detergent to 5 or 6 parts water, wring well, then wipe off the dirt. Use a dry cloth to wipe the surface dry. Do not use volatile liquids such as benzene and thinner which are harmful to the unit.

### STORING DISCS

Be careful not to allow discs to warp; always store discs in their cases vertically, avoiding locations with high heat or humidity, or extremely low temperatures.

### CD LENS CLEANER


The player's pickup lens should not become dirty in normal use, but if for some reason it should malfunction due to soiling, consult your nearest PIONEER authorized service center. Lens cleaners for CD players are commercially available, but special care should be exercised in their use since some may cause damage to the lens.

### CONDENSATION

When this unit is brought into a warm room from previously cold surroundings or when the room temperature rises sharply, condensation may form inside, and the unit may not be able to attain its full performance. If this occurs, allow the unit to stand for about an hour or raise the room temperature gradually.

### CLEANING AND HANDLING COMPACT DISCS

- Always keep your discs clean by wiping them gently with a soft cloth from the inner edge toward the outer periphery.
- If a disc becomes very dirty, dip a soft cloth in water, and after wringing it out well, wipe the dirt away gently, and then remove any water drops with another soft, dry cloth.
- Do not use record cleaning sprays or anti-static agents on discs. Also, never clean discs with benzene, thinner, or other volatile solvents, since damage to the disc surface may result.
- With this player, use discs which display the mark shown below. (Optical audio digital discs.)
- When holding discs, do not touch their signal surfaces (the side reflecting a "rainbow" pattern, opposite the label side). Hold by the edges, or by one edge and the center hole.
- Do not affix gummed labels or tape to the label surfaces. Also, do not scratch or damage the label.
- Discs rotate at high speed inside the player. Do not use damaged (cracked or warped) discs.

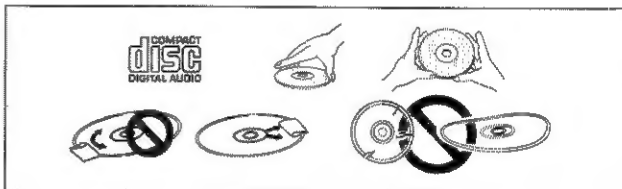

#### NOTE:

- In order to play an 8-cm (3-inch) CD you will need a special Multi-Play Magazine (JD-M108, JD-M308) which is sold separately. Be sure to read thoroughly the Operating Instructions before using it.
- 8-cm (3-inch) CD Adaptors  
It is possible that even an adaptor which meets recommended standard CD specifications will not be usable with the CD player. It is recommended that the special Multi-Play Magazine (JD-M108, JD-M308) be used.
- Never load an 8-cm (3-inch) CD or its adaptor into a standard 12-cm (5-inch) magazine. This may seriously damage the CD player.
- Do not insert only an 8-cm (3-inch) disc and adaptor into the supplied magazine.




## BEFORE OPERATING THE PLAYER


### INSERT DISCS INTO THE 6-DISC MAGAZINE

Insert any discs which you may have into the supplied magazine. Up to six discs may be inserted. The numbering of the discs begins with 1 at the topmost tray, and then increases in order downwards to 6 for the lowest tray. The magazine has a window through which the pulled-out disc tray can be checked. Even during playback, the number of the disc being played back can be checked through this window.


#### 1. Pull out only one disc tray.

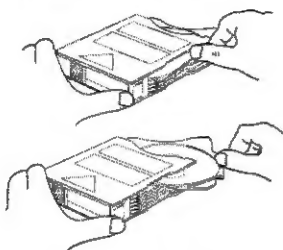

#### 2. Position discs with the label side downward.

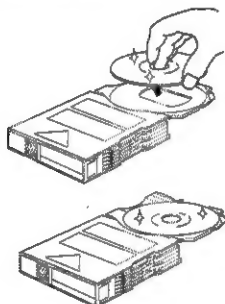

#### 3. Put the disc tray back as it was originally.

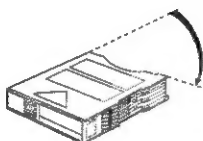


#### 4. Insert other discs by repeating steps 1 to 3.

### CAUTION:

- Please make sure to only pull out one disc tray at a time. (When a disc tray has been pulled out, do not pull out other disc trays.)
- If discs are inserted label side upward, it will not be possible for them to be played. Please make sure to insert them with the label side downward.
- Objects other than discs (song cards, explanations of disc contents, etc.), must never be inserted into the disc trays.
- Do not touch the playing surface of discs (iridescent side) with hands or fingers.

### AFFIXING LABELS TO THE MAGAZINE

- Always attach the labels provided in the designated locations. Correct operation may not be possible if labels or tape are attached in other locations.
- The following are convenient ways of using labels:
  - A: For titles
  - B: For disc names
  - C: For classification
- Do not attach labels on top of other labels.

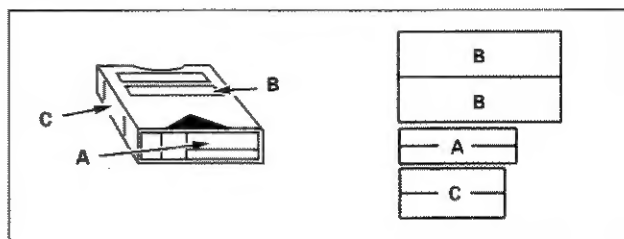

Additional magazines identical to the one supplied are available as options (\*JD-M100, JD-M200, JD-M300, JD-M108, JD-M308).

Please use them to make your own disc library, with separate magazines for each artist or genre.

- \* JD-M100/JD-M200/JD-M300 .....Magazine for 12-cm (5-inch) discs
- JD-M108/JD-M308 .....Magazine for 8-cm (3-inch) discs

### NOTE:

Do not load 8-cm (3-inch) discs into the magazine for 12-cm (5-inch) discs.


### For U. S. customers only

You may purchase additional Pioneer six-compact-disc magazines from your dealer. If however, they are not available at your dealer in the United States, you may order from:

PIONEER ELECTRONICS SERVICE, INC.  
2265 East 220th Street  
P.O. Box 1760, Long Beach  
CA. 90801-1760  
U.S.A.  
Phone #(800)228-7221

## CONNECTIONS

- Make sure that all of the components are turned off before making connections.

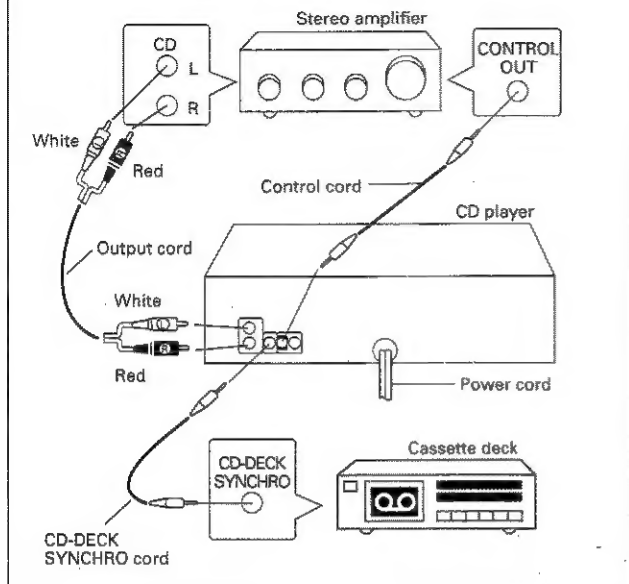

### Making connections

1. Connect the OUTPUT jacks of this unit to the input jacks (CD or AUX) of the amplifier. Make sure that the white plugs are connected to the left (L) jacks and the red plugs to the right (R) jacks.
  - Be sure not to connect this unit to the amplifier's PHONO jacks, as sound will be distorted and normal playback will not be possible.
2. Connect the power cord to a household AC wall outlet or an AC outlet on your amplifier.
  - Make sure plugs are inserted fully into the jacks and wall outlet.

### CD-Deck synchro function

If you have a Pioneer cassette deck provided with the CD-Deck synchro function, connect the CD-DECK SYNCHRO jacks of the CD player and cassette deck. With this function, synchro recording can be carried out between player and deck.


- For details on connections and operation, refer to the operating instructions supplied with the cassette deck.
- The CD-DECK SYNCHRO cord is not supplied with the CD player.

#### NOTE:

In order to enable the CD-DECK SYNCHRO recording function, the normal output cable must be connected to the stereo amplifier.

### System remote control with a Pioneer stereo amplifier that has the mark

(Applicable models: PD-M502 [all models], PD-M552 [all models], PD-M602 [U.S. and Canadian models only], PD-M702 [U.S. and Canadian models only])

When a Pioneer stereo amplifier bearing the  mark is used, connect the CONTROL IN jack on the rear panel of the CD player to the CONTROL OUT jack of the amplifier. This will enable the CD player to be controlled using the remote control unit supplied with the stereo amplifier. If you do not plan to use this feature, it is not necessary to connect CONTROL IN/OUT jacks.

- The control cord is supplied with the CD player.
- The remote control unit supplied with the amplifier can be used to control Play, Stop, Pause, Track/Disc Search and Disc Change operations.
- For instructions regarding connections and operation, refer to the operating instruction manual provided with your stereo amplifier.

#### NOTE:

- When a control cord is connected to the player's CONTROL IN jack, direct control of the player with the remote control unit is not possible. Operate the player with the remote control unit by aiming it at the amplifier. (Except for PD-M502)
- Be sure to connect both of the control cord's plugs securely to the CONTROL IN and CONTROL OUT terminals. Do not connect only one end of the cable.
- Be sure to turn off the power of the amplifier before connecting the power cord and output cord.

### Connecting the power cord

Connect the power cord to a household AC wall outlet or an AC outlet on your amplifier. (See the section "AC power cord connection and functions" on page 12.)

- Make sure plugs are inserted fully into the jacks and wall outlet.


### POWER-CORD CAUTION

Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short circuit or electric shock. Do not place the unit, a piece of furniture, etc., on the power cord, or pinch the cord. Never make a knot in the cord or tie it with other cords. The power cords should be routed such that they are not likely to be stepped on. A damaged power cord can cause fire or give you an electrical shock. Check the power cord once in a while. When you find it damaged, ask your nearest PIONEER authorized service center or your dealer for a replacement.


# **NAMES AND FUNCTIONS OF PARTS**

## **FRONT PANEL**


PD-M502

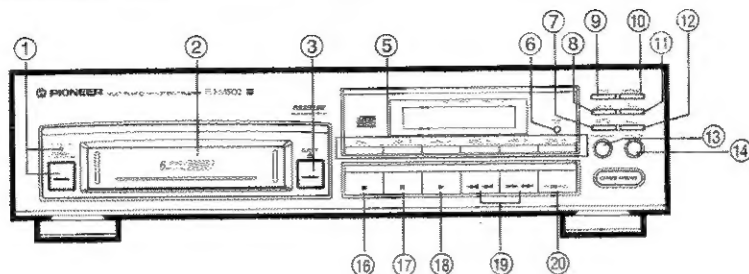


PD-M552

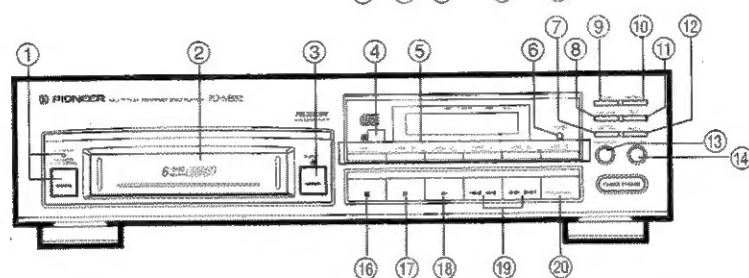

PD-M602

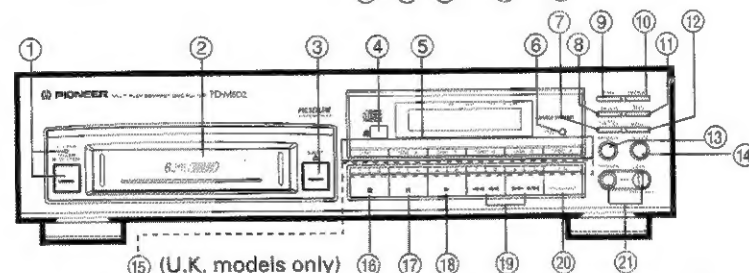

PD-M702

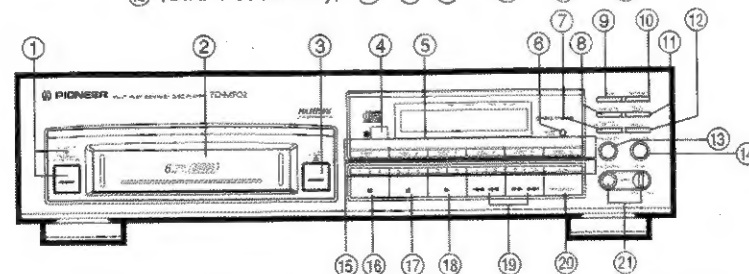


- ① POWER STANDBY/ON switch and STANDBY indicator
- ② Magazine insertion slot
- ③ EJECT button (▲)
- ④ Remote sensor (Except for PD-M502)  
Receives the signal from the remote control unit.  
• The PD-M502 is not equipped with the remote sensor.
- ⑤ Disc number buttons (DISC 1~DISC 6)
- ⑥ MUSIC TYPE button
- ⑦ COMPU/TIME FADE button
- ⑧ DELETE button
- ⑨ TIME button
- ⑩ REPEAT button
- ⑪ AUTO FADER button
- ⑫ ADLC (Automatic Digital Level Controller) button

- ⑬ RANDOM play button
- ⑭ HI-LITE scan button
- ⑮ Digit buttons (1~10, >10) (PD-M602 [U.K. model]/PD-M702 only)
- ⑯ Stop button (■)
- ⑰ Pause button (||)
- ⑱ Play button (▶)
- ⑲ Track/Manual search buttons (◀◀ ◀▶ ▶▶ ▶▶)
- ⑳ PROGRAM button
- ㉑ Headphones jack (PHONES) and headphones volume control (PHONES LEVEL) (PD-M602/PD-M702 only)




## REMOTE CONTROL UNIT (Except for PD-M502)

PD-M552/PD-M602

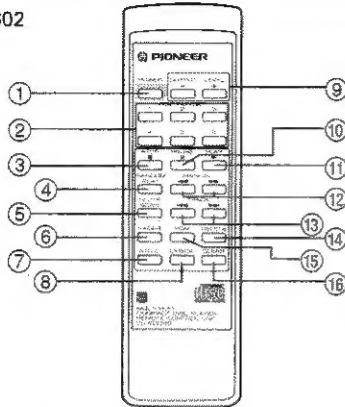

PD-M702

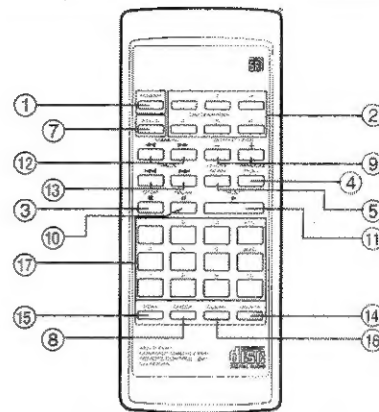


Remote control buttons with the same names or marks as buttons on the front panel of the player control the same operations as the corresponding front panel buttons.

- ① POWER button
- ② DISC NUMBER buttons (1~6)
- ③ STOP button (■)
- ④ RANDOM PLAY button
- ⑤ HI-LITE SCAN button
- ⑥ FADER button (PD-M552/PD-M602 only)
- ⑦ ADLC (Automatic Digital Level Controller) button
- ⑧ CHECK button


- ⑨ OUTPUT LEVEL buttons (+/-)
- ⑩ PAUSE button (||)
- ⑪ PLAY button (▶)
- ⑫ MANUAL search buttons (◀/▶)
- ⑬ TRACK search buttons (◀◀/▶▶)
- ⑭ DELETE button
- ⑮ PGM (program) button
- ⑯ CLEAR button
- ⑰ Track number/ Digit buttons (1~10, +10, ≥20) (PD-M702 only)

## BASIC OPERATION

PD-M502/PD-M552

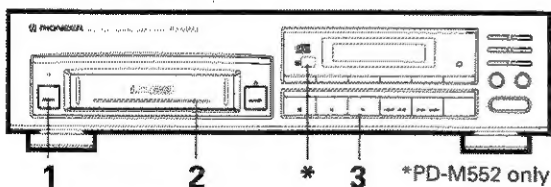

PD-M602/PD-M702

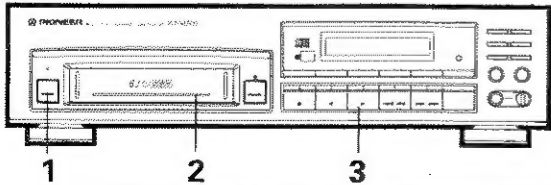

1

STANDBY  
O  
POWER  
STANDBY/ON



### TO PLAY A COMPACT DISC

1. Turn on the power to the player.
2. Insert a magazine, pushing it in until a click sound is heard.
  - Insert the discs to be played into the magazine beforehand. (Refer to "BEFORE OPERATING THE PLAYER" on page 6.)
  - When the power is turned off (in standby mode), inserting a magazine automatically turns on the power (Automatic Power On function).
3. Press the ▶ button to start playback.


### To pause playback temporarily:

Press the || button. The || indicator lights and playback is paused at that point. Pressing the || button again or ▶ button resumes playback from the position where pause mode was entered.


### To stop playback:

Press the ■ button. The player returns to the beginning of the first track on the disc at which playback was stopped. If the ■ button is pressed twice, the player returns to the beginning of the first track on the first disc and enters stop mode.

## BASIC OPERATION

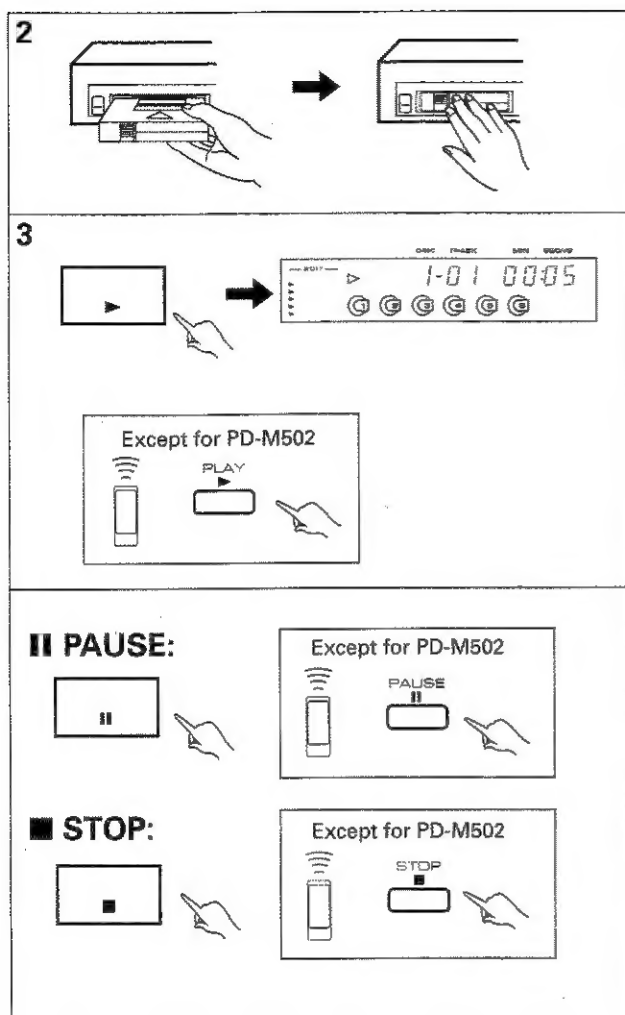


Operations indicated by the [  ] mark are performed with the remote control unit.

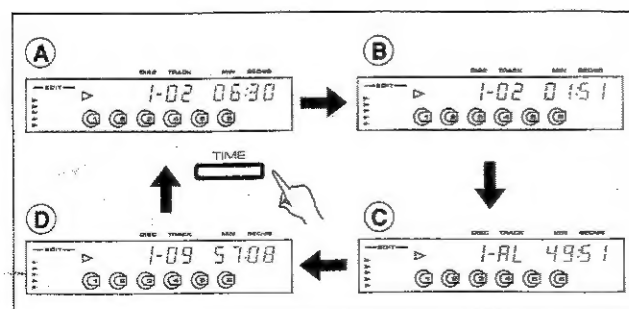

### NOTE:

When the power is turned off while a magazine is in the player, the player memorizes which disc was played just before the power was turned off. Thus, when the power is next turned on, pressing the play button starts playback from the first track on the memorized disc.

### To stop playback and take out the magazine:

Press the EJECT button () to remove the magazine, and then press the POWER switch to turn off the power.

Even when the power is turned off (in standby mode), the magazine will be ejected by pressing the EJECT button. (Power Down Eject)

### Cautions regarding handling of magazines:

- When inserting a magazine into the player, make sure that the direction of insertion is correct.
- After use, store in the case provided. Do not place in locations subject to high temperatures or exposed to direct sunlight.
- Do not take magazines apart.
- Be careful not to drop, or hit magazines against things. Also do not apply strong force to trays which have been withdrawn.
- Application of benzene, thinner, insecticide or other volatile liquids to a magazine may damage the surface, so keep magazines away from such substances.

### Timer playback:

By using a commercially available audio timer, it is possible to initiate playback at any time automatically.

1. Insert a magazine into the magazine slot.
2. Set the time at which you wish playback to begin. The timer will supply power to both the amplifier and the player at the preset time, turning all the components on and initiating the playback mode. Playback starts from the first track on the first disc.

### Caution:

- Do not unplug the power cord or do not turn off the power with an audio timer during playback, as this could result in damage to the disc.
- If a power failure occurs while the power is turned off (standby mode), the power is automatically turned on with timer playback function when the power is supplied. THEREFORE, DISCONNECT THE AC POWER CORD WHEN THE PLAYER IS NOT USED FOR A LONG PERIOD OF TIME.

### TIME DISPLAY

During playback, pressing the TIME button changes the time display in the following sequence: (A) Time (elapsed playback time of the track being played) → (B) Remain (remaining playback time of the track being played) → (C) AL Remain (remaining playback time from the playing point to the end of the disc) → (D) Total (total playback time of the disc).

- With track No. 24 or more, the Remain time (B) cannot be displayed.
- During program playback, delete program playback, random playback or delete random playback, AL Remain time (C) cannot be displayed.
- During Program playback, the number of program steps can be displayed with the Total setting (D).
- During time fade playback, the remaining playback time until the playback stops with a fade-out can be displayed with the AL Remain setting (C).

## VARIOUS OPERATIONS

### DISC SEARCH – TO SEARCH FOR A PARTICULAR DISC

During playback or stop mode

 
PD-M502/PD-M552




PD-M602/PD-M702



PD-M552/PD-M602 only



PD-M702 only

 


When the disc number (DISC 1~DISC 6) button is pressed, the player searches for the specified disc and playback starts from the beginning of that disc.

#### NOTE:

 
- If "no DISC" appears on the display, you have pressed the disc number of a tray which does not contain a disc.
- During program playback, Disc Search cannot be carried out.

### TRACK SEARCH – TO SEARCH FOR A PARTICULAR TRACK

During playback, pause or stop mode



Except for PD-M502

 

When the  $\gg \gg$  (or  $\gg \gg$ ) button is pressed once or a number of times, playback advances to the beginning of a track located after the track being played. The position of the located track corresponds to the number of times the button is pressed.

When the  $\ll \ll$  (or  $\ll \ll$ ) button is pressed once, playback returns to the beginning of the track being played. When this button is pressed more than once, playback is returned to a track located before the track being played.

- When the  $\gg \gg$  (or  $\gg \gg$ ) button or  $\ll \ll$  (or  $\ll \ll$ ) button is operated in pause mode or stop mode press the  $\gg$  button to start playback.

#### NOTE:

 
- During program playback, the  $\gg \gg$  (or  $\gg \gg$ ) button or  $\ll \ll$  (or  $\ll \ll$ ) button can be used to select the programmed track.
- During normal playback, Track Search can be carried out on one disc only. In stop mode, this operation can be carried out from 1st track through 99th track.

[PD-M602 (U.K. model)/PD-M702 only]

During playback or stop mode.



PD-M702 only



To search for track No. from 1 to 10, simply press the corresponding digit buttons (1~10). To search for tracks No. 11 and above, use  $\gg 10$  button (the  $\gg 10$ , and  $\gg 20$  buttons are provided only on the PD-M702 remote control unit).

#### Example:

To enter track No. 17:  $\gg 10$ , 7 or  $\gg 10$ , 7

To enter track No. 30:  $\gg 10$ , 3, 0 or  $\gg 20$ , 3, 0

- When entering 11 or above, 10 functions as 0.
- When  $\gg 10$ ,  $\gg 10$  or  $\gg 20$  is pressed, the digit button to be next entered should be pressed within 5 seconds.

#### NOTE:

 
During program playback, Track search can not be performed with the digit buttons.

### MANUAL SEARCH – TO SEARCH FOR A PARTICULAR PASSAGE

During playback or pause mode



Except for PD-M502



While the  $\gg \gg$  button is kept pressed, playback rapidly advances toward the end of the disc. When playback reaches the end of the disc, the player enters pause mode and "END" is displayed. While the  $\ll \ll$  button is kept pressed, playback rapidly reverses toward the beginning of the disc. When the desired passage is reached, release the  $\gg \gg$  button or  $\ll \ll$  button. The player enters original mode (playback or pause) where  $\gg \gg$  button or  $\ll \ll$  button is released.

#### NOTE:

- During normal playback, Manual Search can be carried out on one disc only.
- During program playback, Manual Search can be carried out in one program step only.

### TO REPEAT PLAYBACK (REPEAT PLAY)



To repeatedly play the displayed track, press the REPEAT button once. The REPEAT-1 indicator lights. The REPEAT button can be pressed in any playback mode.

To repeatedly play all tracks on all of the discs in normal playback mode or in the specified playback mode (Program playback, Delete program playback or Random playback), press the REPEAT button twice. The REPEAT indicator lights.

- To exit repeat mode, press the REPEAT button so that the REPEAT-1 or REPEAT indicator goes off.
- When the time fade edit operation is performed, the repeat playback cannot be carried out.

## VARIOUS OPERATIONS

### RANDOM PLAYBACK – TO PLAY ALL TRACKS IN RANDOM ORDER



Except for PD-M502



Press the RANDOM play button. The RANDOM indicator lights and all tracks on all discs are played in ■ random order. To play tracks other than the deleted tracks in a random order, press the RANDOM play button after carrying out the Delete Program procedure. See "Delete Program Playback" on page 15.

### MAGAZINE HI-LITE SCAN

During stop mode



Except for PD-M502



When the HI-LITE scan button is pressed once during stop mode, playback starts from a point 1 minute after the beginning of the first track, and the first track of each disc is played for about 10 seconds. The DISC SCAN indicator blinks during Disc Scan mode. After the first tracks of all discs are scanned, the player enters stop mode.

When the HI-LITE scan button is pressed twice during stop mode, playback starts from a point 1 minute after the beginning of the track, and each track is played for about 10 seconds. The SCAN indicator blinks during Track Scan mode. After all tracks of all discs are scanned, the player enters stop mode.

#### To exit Magazine Hi-Lite Scan mode:

Press the ■, ► or disc number (DISC 1~DISC 6) button. (the Hi-lite scan mode can also be canceled by pressing the digit buttons 1~10, >10 on the PD-M602 [U.K. models] and PD-M702 model, or by pressing the 1~10, <10 or >20 buttons on the PD-M702 remote control unit).

When the ► button is pressed, normal playback starts from the current point. When the disc number button or digit button (PD-M602 [U.K. model]/PD-M702 only) is pressed, the selected disc or track is played from the beginning.

#### NOTE:

- Hi-Lite Scan can be carried out from the desired elapsed time of the track. During playback, press the HI-LITE scan button at the point you want to start Hi-Lite Scan playback. The player memorizes the minute and second of the point and Track Scan playback is carried out from the memorized minutes and second on each track. Each time the HI-LITE scan button is pressed, the mode switches between Disc Scan and Track Scan.

Programming of only desired tracks is possible during Scan playback. See "Direct program" on page 14.


Track Scan playback, you can skip to the desired the ◀◀ button or ▶▶ button.

When the REPEAT button is pressed, Hi-Lite Scan playback is canceled.

When the playback time of a track is less than one minute or is the memorized time, Hi-Lite Scan playback is carried out from the beginning of the track for about 10

When playback time of a track is less than 10 seconds, the track is played from the beginning to the end.

### ADJUSTING THE SOUND VOLUME (Except for PD-M502)

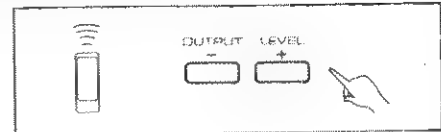


Press the OUTPUT LEVEL "–" or "+" button to adjust the output level. The output level can be adjusted between 0 dB and –25 dB in steps of 1 dB.

- The output level at the OUTPUT jacks and PHONES jack will be adjusted simultaneously (PD-M602/PD-M702 only).

### ADLC (AUTOMATIC DIGITAL LEVEL CONTROLLER)

 When the difference of recording level between discs is noticeable, the volume level should be adjusted for each disc, especially during program playback or random playback whose tracks are selected between 2 discs or more. In such cases, pressing the ADLC button automatically sets the output level to the proper level. When ADLC is turned on, the ADLC indicator lights.

- To turn off ADLC, press the ADLC button so that the ADLC indicator goes off.
- With some selections, sound becomes unnatural. In such cases, turn off ADLC.



Except for PD-M502



#### NOTE (Except for PD-M502):

- The setting of the OUTPUT LEVEL buttons are canceled when ADLC is turned on.
- When ADLC is turned on, the OUTPUT LEVEL buttons cannot be operated.

### AC POWER CORD CONNECTION AND FUNCTIONS


Some functions cannot be carried out depending on the connection of AC power cord.

Function	When the AC power cord is connected to the unswitched outlet of an amplifier or wall outlet.	When the AC power cord is connected to the switched outlet of an amplifier or audio timer.
Timer playback	No	Yes
Program memory	Yes	No
Delete program memory	Yes	No
Output level memory	Yes	No







For details, refer to the description of each function of this Operating Instructions.

## TO PLAY ONLY DESIRED TRACKS/DISCS

PD-M502/PD-M552

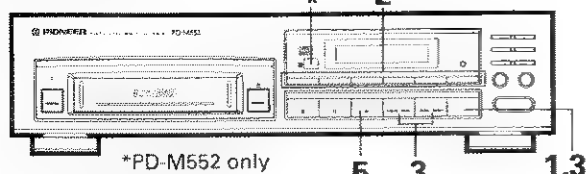

PD-M602/PD-M702

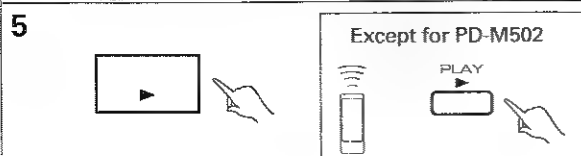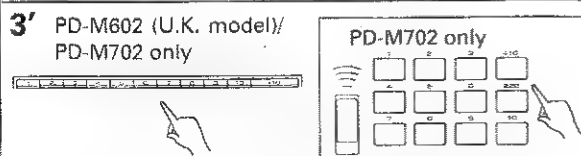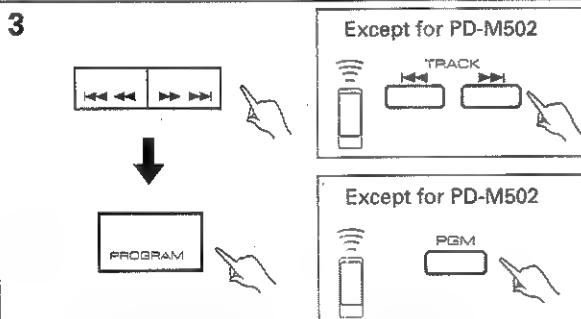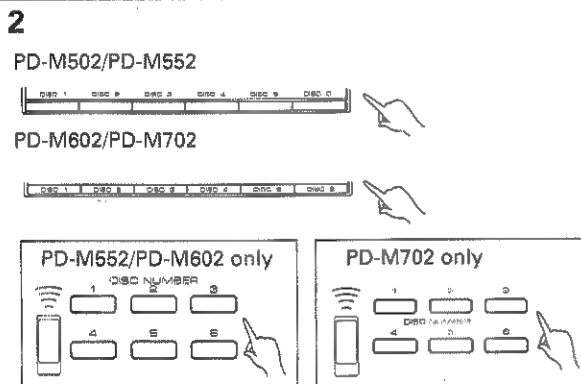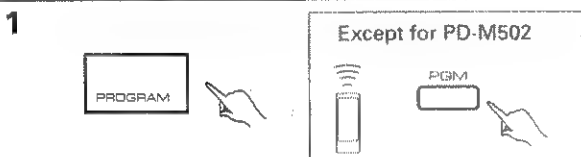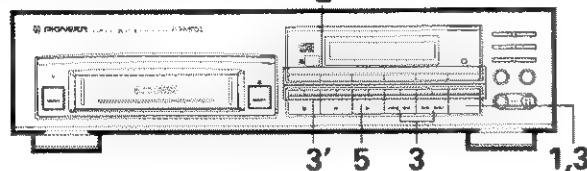

## PROGRAM PLAYBACK – TO PROGRAM TRACKS/DISCS IN DESIRED ORDER

1. During stop mode, press the **PROGRAM** button.  
The PROGRAM indicator lights and "DISC?" appears on the display.
2. Press the disc number button which contains the tracks to be programmed.  
"AL" (all tracks) appears and then the display shows "TRACK?". To program entire discs, enter the desired disc numbers with the disc number buttons and go to step 4.
3. Press the **◀◀** or **▶▶** button so that the desired track No. appears on the display and press the **PROGRAM** button.

[PD-M602 (U.K. model)/PD-M702 only]

- 3'. Enter the track No. to be programmed with the digit buttons.  
Only during stop mode, you can use the **◀◀** or **▶▶** button. After selecting the track No., be sure to press the **PROGRAM** button.
4. Repeat steps 2 and 3 (or 3') to program other tracks.
5. Press the **▶** button.  
The tracks are played in the programmed order. When all programmed tracks have been played, the player enters stop mode.

### NOTE:

When the tracks is selected with the **◀◀** or **▶▶** button in step 3, the displayed track No. is automatically programmed if the **◀◀** or **▶▶** button is not pressed within 2 seconds. Therefore, be sure to press the **◀◀** or **▶▶** button sequentially until the desired track No. appears on the display.

To stop Program playback, Press the **■** button.

### To exit program mode:

During program playback, select a disc No. with the disc number button and then press the **▶** button. The player enters normal playback mode and playback starts from the beginning of the selected disc.

- Programs containing up to 32 steps can be created.
- To go to the previous or next step in a program, press the **◀◀** or **▶▶** button.
- To enter track No. 11 or above with the digit buttons, see "Track Search" on page 11. (PD-M602 (U.K. model)/PD-M702 only)
- If the magazine is in the player, the program contents will not be erased even if the power is turned off.

### NOTE:

During Delete programming or Time fade editing the **PROGRAM** button cannot be operated.



## TO PLAY ONLY DESIRED TRACKS/DISCS

### Direct Program:

During normal playback or Magazine Hi-Lite Scan playback, the track being played can be programmed.

1. Press the **PROGRAM** button to enter the program mode.
2. To search for a desired track during normal playback, it is possible to skip to succeeding tracks by pressing the **◀◀** **◀◀** or **▶▶** **▶▶** button.  
Also, Magazine Hi-Lite Scan function can be used to move from track to track through the disc.
3. If you wish to program the track currently playing, press the **PROGRAM** button while the track is playing.
  - Direct programming is not possible during program playback.

### To check the program contents

(Except for PD-M502):

During program mode, set the player to stop mode and press the **CHECK** button on the remote control unit. The program contents will be displayed in the programmed order.

- After confirming the last program step, the display will show "0-00".

### PROGRAMMING A PAUSE

Inserting a pause in your program can be very useful when carrying out recording. Press the **||** button instead of entering a track number. "PA" appears on the display panel.

- For example, when recording on both sides of a cassette tape, if you program a pause after the last track to be recorded on the first side, program playback will pause at that point to allow you to switch tape sides. To resume program playback after the player enters pause mode, press the **||** button.

#### NOTE:

- A pause can be programmed only when the program procedure is performed under stop mode.
- A pause cannot be programmed at the beginning of a program (P-01), nor can two pauses be programmed one after the other.
- A pause inserted in a program is counted as one step.
- If a pause is programmed as the last step of a program, the player will not enter the pause mode.

### To erase a program (Except for PD-M502):

During program mode, press the **CLEAR** button on the remote control unit.

The last program step is erased and the contents of the previous program step are displayed.

#### NOTE:

Contents of a program can be erased during playback as well. However, tracks preceding the currently playing track cannot be erased in this way.

### To clear all of the program contents:


- A During stop mode, press the **■** button.
- B When the magazine is ejected, the program contents will be cleared.

### To modify the program contents (Except for PD-M502):

1. During program mode, set the player to stop mode and press the **CHECK** button on the remote control unit so that the program step to be corrected appears on the display.
2. Enter the new disc No. with the disc number buttons and then press the **◀◀** **◀◀** or **▶▶** **▶▶** button (on the PD-M602 [U.K. model] and PD-M702, one of the digit buttons can also be pressed if desired) so that the new track No. appears on the display.
3. Press the **PROGRAM** button (not necessary when the digit buttons are to select tracks on the PD-M602 [U.K. model] and PD-M702).
  - Repeat steps 1 through 3 to change other tracks as desired.
  - If the **◀◀** **◀◀** or **▶▶** **▶▶** button is not pressed within 2 seconds when correcting the track No., the displayed track No. is automatically memorized.







## TO PLAY ONLY DESIRED TRACKS/DISCS

PD-M502/PD-M552

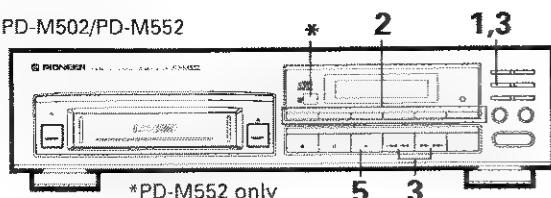

\*PD-M552 only

PD-M602/PD-M702

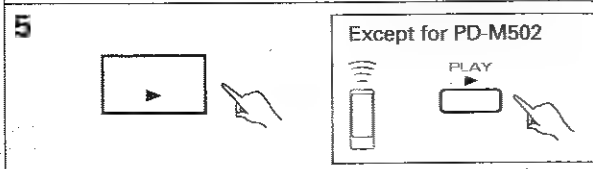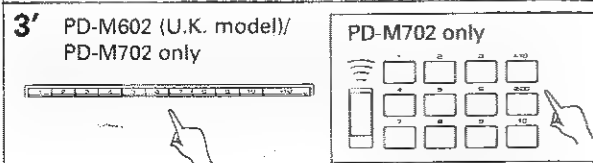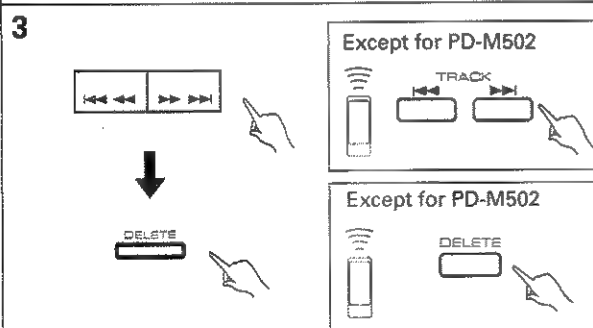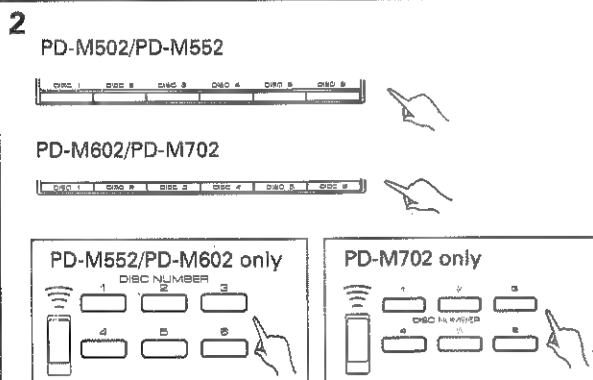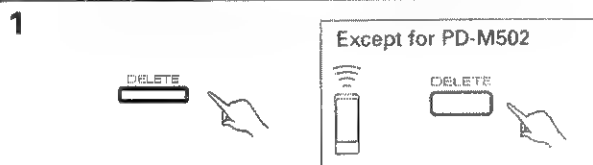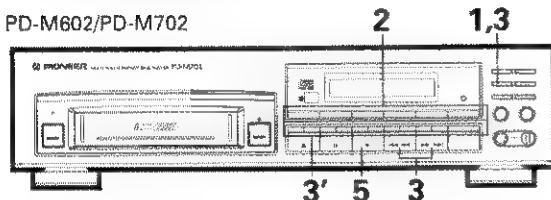

### DELETE PROGRAM PLAYBACK – TO DELETE UNDESIRED TRACKS/DISCS

1. During stop mode, press the **DELETE** button.  
The **DELETE** indicator lights and "DISC?" appears on the display.
2. Press the disc number button which contains the track to be deleted.  
"AL?" (all tracks) appears and then the display shows "TRACK?". To delete entire discs, enter the desired disc numbers with the disc number buttons and go to step 4.
3. Press the **◀◀** or **▶▶** button so that the track No. to be deleted appears on the display and press the **DELETE** button.

[PD-M602 (U.K. model)/ PD-M702 only]

- 3'. Enter the track No. to be deleted with the digit buttons.  
Only during stop mode, you can use the **◀◀** or **▶▶** button. After selecting the track No. be sure to press the **DELETE** button.
4. Repeat steps 2 and 3 (or 3') to delete other tracks.
5. Press the **▶** button.

All tracks other than deleted tracks/discs are played in the order of the disc and track numbers. When tracks have been played, the player enters stop mode.

#### NOTE:

When the track is selected with the **◀◀** or **▶▶** button in step 3, the displayed track No. is automatically programmed if the **◀◀** or **▶▶** button is not pressed within 2 seconds. Therefore, be sure to press the **◀◀** or **▶▶** button sequentially until the desired track No. appears on the display.

To stop Delete program playback, press the **■** button.

- To enter track No. 11 or above with the digit buttons, see "Track Search" on page 11. (PD-M602 [U.K. model]/PD-M702 only)
- Track No. 33 or above cannot be deleted.
- To go to the previous or next disc/track other than the deleted disc/track, press the **◀◀** or **▶▶** button.
- The disc number button or digit button (PD-M602 [U.K. model]/PD-M702 only) can be used to play the disc or track other than the deleted disc or track.
- If the magazine is in the player, the delete program contents will not be erased even if the power is turned off.

#### NOTE:


After programming for Program playback or during Program playback mode, Delete programming can not be carried out.

#### To clear all of the Delete program contents:

- A During stop mode, press the **■** button.
- B When the magazine is ejected, the program contents will be cleared.
- C Press the **CLEAR** button on the remote control unit during stop mode or play mode. When the **CLEAR** button is pressed during Delete program playback mode, the player enters normal playback mode. (Except for PD-M502)


## CONVENIENT OPERATION FOR RECORDING

PD-M502/PD-M552

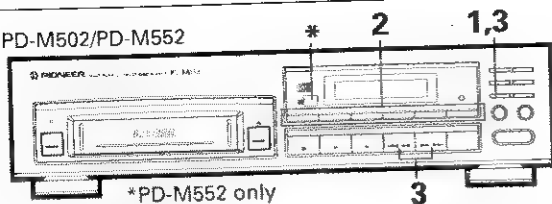

\*PD-M552 only

PD-M602/PD-M702

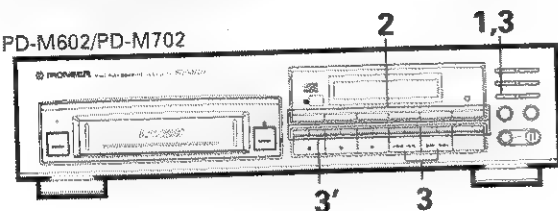

1



2

 
PD-M502/PD-M552




PD-M602/PD-M702




PD-M552/PD-M602 only





PD-M702 only

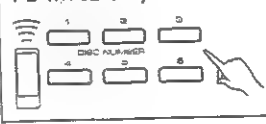

3

 

Except for PD-M502

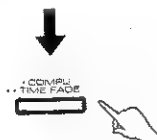 


3'

PD-M602 (U.K. model)/PD-M702 only



 PD-M702 only



## COMPU PROGRAM EDITING (COMPUTER ALLOCATED PROGRAM EDITING)

Tracks are selected for both sides of the tape.

1. During stop mode, press the **COMPU/TIME FADE** button 1 time

The COMPU indicator lights and "DISC?" appears on the display.

2. Select the disc No. with the disc number button. "TIME?" appears on the display.

3. Press the **◀◀** or **▶▶** button so that the desired playing time appears on the display and press the **COMPU/TIME FADE** button.

Each time the **▶▶** or **◀◀** button is pressed, the time will be changed in the following sequence:

→ 46 ↔ 54 ↔ 60 ↔ 74 ↔ 90 ← (minutes)

With the **▶▶** button, the time will be changed in the forward direction.

With the **◀◀** button, the time will be changed in the reverse direction.

[PD-M602 (U.K. model)/PD-M702 only]

3'. Enter the tape playing time in minutes with the digit buttons (1-10).

Press the 10's digit button and 1's digit button sequentially. (To enter 9 minutes or less, press [9] and then the corresponding digit button.) For example, to enter 46 minutes, press [4] and [6] sequentially.

The displayed time is memorized. The player now programs the tracks for the first side of the tape within half the selected playing time, programs pause, and then programs the tracks for the second side of the tape within half the selected playing time. After the programming is completed, the display shows all of the programmed tracks and their playing time in the programmed order.

Example: The tape playing time 46 minutes is selected.

- The programmed contents are displayed in the programmed order.

Side A



Side B



**NOTE for PD-M602 (U.K. model) and PD-M702:**

Instead of the digit buttons, the **◀◀** or **▶▶** button can be used to select the tape playing time. Each time the **▶▶** button is pressed, the time will be changed in the following sequence:

→ 46 → 54 → 60 → 74 → 90 ← (minutes)


With the **◀◀** button, the time will be changed in the reverse direction. After the time is selected, be sure to press the **COMPU/TIME FADE** button. When the **COMPU/TIME FADE** button is not pressed within a few seconds after the time is selected with the **◀◀** or **▶▶** button, the displayed time is automatically memorized.

## CONVENIENT OPERATION FOR RECORDING

### NOTE:

- When the time is selected with the  $\lll$   $\lll$  or  $\ggg$   $\ggg$  button in step 3, the displayed time is automatically memorized if the  $\lll$   $\lll$  or  $\ggg$   $\ggg$  button is not pressed within 3 seconds.
- Up to 24 steps can be programmed.
- With discs containing 24 tracks or more, programming may not be correctly performed.
- If the selected time is too short for any track to be programmed, programming cannot be performed.

- If you wish to enter the time with the digit buttons after the time is already entered with the  $\lll$   $\lll$  or  $\ggg$   $\ggg$  button in step 3, press  $\lll$   $\lll$  or  $\ggg$   $\ggg$ , or when using the PD-M702 remote control unit, press  $\lll$   $\lll$  or  $\ggg$   $\ggg$ . The digit buttons can now be operated. (PD-M602 (U.K. model)/PD-M702 only)
- If the magazine is in the player, the contents of the Compu program editing will not be erased even if the power is turned off.

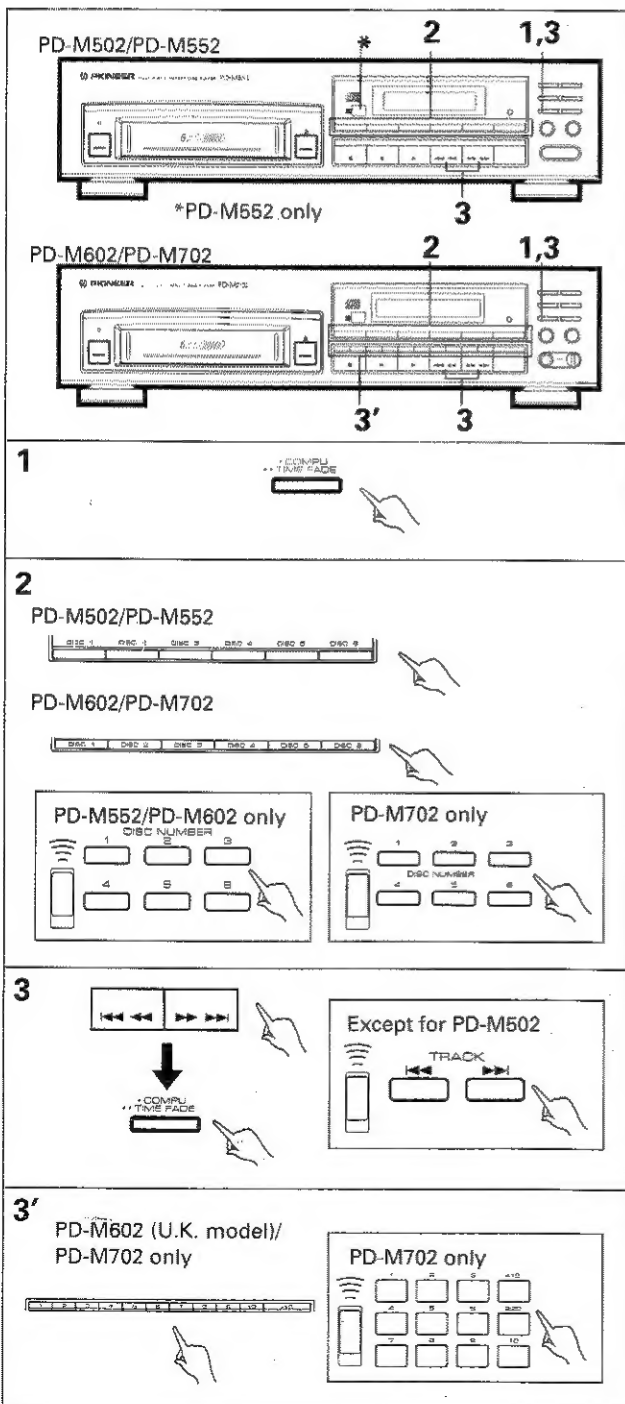

### TIME FADE EDITING

Tracks are selected within the specified time and playback pauses with a fade-out.

#### 1. During stop mode, press the COMPU/TIME FADE button 2 times.

The FADE indicator lights and "DISC?" appears on the display.

#### 2. Select the disc No. with the disc number button.

"TIME?" appears on the display.

#### 3. Press the $\lll$ $\lll$ or $\ggg$ $\ggg$ button so that the desired playing time appears on the display and press the COMPU/TIME FADE button.

Each time the  $\ggg$   $\ggg$  or  $\lll$   $\lll$  button is pressed, the time will be changed in the following sequence:

$\rightarrow 23 \leftrightarrow 27 \leftrightarrow 30 \leftrightarrow 37 \leftrightarrow 45 \leftarrow$  (minutes)

With the  $\ggg$   $\ggg$  button, the time will be changed in the forward direction.

With the  $\lll$   $\lll$  button, the time will be changed in the reverse direction.

The displayed time is memorized. The player now programs the tracks within the selected playing time.

[PD-M602 (U.K. model)/PD-M702 only]

#### 3'. Enter the playing time in minutes with the digit buttons (1-10).

Press the 10's digit button and 1's digit button sequentially. (To enter 9 minutes or less, press  $\lll$   $\lll$  and then the corresponding digit button.) For example, to enter 23 minutes, press  $\lll$   $\lll$  and  $\lll$   $\lll$  sequentially.

The displayed time is memorized. The player programs the tracks within the selected playing time.

- Instead of the digit buttons, the  $\lll$   $\lll$  or  $\ggg$   $\ggg$  button can be used to select the tape playing time. Each time the  $\ggg$   $\ggg$  button is pressed, the time will be changed in the following sequence:

$\rightarrow 23 \rightarrow 27 \rightarrow 30 \rightarrow 45 \leftarrow 37 \leftarrow$  (minutes)

With the  $\lll$   $\lll$  button, the time will be changed in the reverse direction. After the time is selected, be sure to press the COMPU/TIME FADE button. When the COMPU/TIME FADE button is not pressed within a few seconds after the time is selected with the  $\lll$   $\lll$  or  $\ggg$   $\ggg$  button, the displayed time is automatically memorized.

### NOTE:

- When the time is selected with the  $\lll$   $\lll$  or  $\ggg$   $\ggg$  button in step 3, the displayed time is automatically memorized if the  $\lll$   $\lll$  or  $\ggg$   $\ggg$  button is not pressed within 3 seconds.

## CONVENIENT OPERATION FOR RECORDING


### To clear the Time Fade contents:

- Ⓐ During stop mode, press the ■ button.
- Ⓑ When the magazine is ejected, the Time Fade contents will be cleared.
- Ⓒ Press the CLEAR button on the remote control unit during stop mode or play mode. When the CLEAR button is pressed during Time Fade playback mode, the player enters normal playback mode. (Except for PD-M502)

### One-touch Fade:

Playback can be started from the desired point with a fade-in and stopped at the desired point with a fade-out.

- The One-touch Fade function can be carried out in Normal playback, Program playback/Delete Program playback, Random playback or Magazine Hi-Lite Scan mode. Set the player to the desired playback mode, and then perform the following procedure.
- Ⓐ During pause mode, press the AUTO FADER button. "FADER" appears on the display and playback starts with a fade-in.
- Ⓑ During playback, press the AUTO FADER button. "FADER" appears on the display and playback pauses with a fade-out.

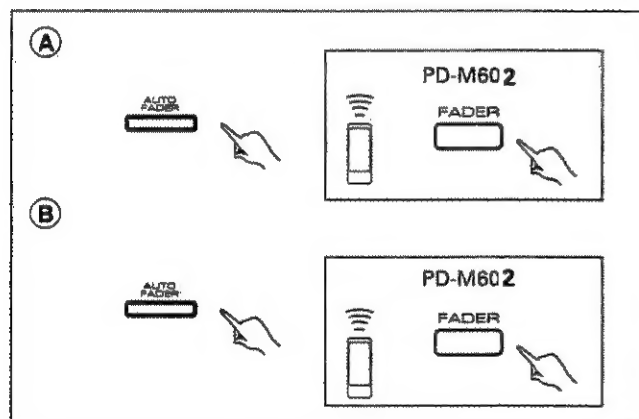

## MUSIC TYPE MEMORY

- A music type can be memorized for each 6-disc magazine. After recording the music type, whenever the specific magazine is loaded, the recorded music type name is displayed. Six different music types can be selected.
- MUSIC TYPEs can be recorded for up to ten CD magazines.
- Perform this operation after loading the magazine into the player.

### 1. From the stop mode, press the MUSIC TYPE button.

Each time the button is pressed the display changes to indicate the music type in the following order:

→ POP → ROCK → JAZZ → DANCE → CLASS → OTHER  
← DISPLAY OFF ←

### 2. Select the music type you wish to memorize by pressing the button as noted above; when the display is left on a given music type for one second or more, the M.TYPE indicator will light, and the displayed music type will be memorized.

- When DISPLAY OFF is selected, the music type for that magazine is cancelled.
- If the MUSIC TYPE button is pressed during the play mode, the music type memorized for the current magazine will be displayed for 3 seconds. The music type is also displayed when the MUSIC TYPE button is pressed during the stop mode.
- If you attempt to record music types for more than ten magazines, the oldest recorded music type will be erased and replaced with the newly recorded music type.



## TROUBLESHOOTING

Incorrect operations are often mistaken for trouble and malfunctions. If you think that there is something wrong with this component, check the points below. Sometimes the trouble may lie in another component. Investigate the other components and electrical appliances being used.

If the trouble cannot be rectified even after exercising the checks listed below, ask your nearest PIONEER authorized service center or your dealer to carry out repair work.

Symptom	Probable cause	Remedy
Magazine is not expelled when the EJECT button (▲) is pressed.	<ul style="list-style-type: none"> <li>Power plug is disconnected from outlet.</li> </ul>	<ul style="list-style-type: none"> <li>Connect plug to amplifier or wall outlet.</li> </ul>
When playback is started, it stops immediately. Pauses or stops during playback.	<ul style="list-style-type: none"> <li>Disc is loaded upside down.</li> <li>Smudges, etc., on the disc.</li> </ul>	<ul style="list-style-type: none"> <li>Load the disc correctly with the label side DOWN.</li> <li>Clean the smudges from the disc and then play it again.</li> </ul>
No sound	<ul style="list-style-type: none"> <li>Output cords are connected incorrectly or loosely.</li> <li>Incorrect operation of stereo amplifier.</li> <li>Pin plugs and/or amplifier terminals are dirty.</li> <li>Player is in pause mode.</li> </ul>	<ul style="list-style-type: none"> <li>Connect properly.</li> <li>Check the settings of amplifier switches and sound volume controls.</li> <li>Clean away dirt.</li> <li>Press the ► or    button.</li> </ul>
Sound is distorted, noise is output.	<ul style="list-style-type: none"> <li>Incorrect connections.</li> <li>Pin plugs and/or amplifier terminals are dirty.</li> <li>Interference is being picked up from a TV set.</li> </ul>	<ul style="list-style-type: none"> <li>Connect to amplifier's AUX or CD terminals. Do not connect to PHONO terminals.</li> <li>Clean away dirt.</li> <li>Switch OFF TV set, or move player away from TV set.</li> </ul>
With certain discs, loud noise is produced, or play stops.	<ul style="list-style-type: none"> <li>Disc has bad scratch or warp.</li> <li>Disc is extremely dirty.</li> </ul>	<ul style="list-style-type: none"> <li>Replace the disc.</li> <li>Clean disc.</li> </ul>
The picture of the TV screen is fluctuating or FM broadcast has noise interference.	<ul style="list-style-type: none"> <li>Interference is being picked up from the CD player.</li> </ul>	<ul style="list-style-type: none"> <li>Turn off POWER of the player, or move the player away from TV or tuner.</li> </ul>
Remote control will not function. (Except for PD-M502)	<ul style="list-style-type: none"> <li>Dead batteries.</li> <li>Too far from player or wrong angle.</li> <li>Obstruction between player and remote control unit.</li> </ul>	<ul style="list-style-type: none"> <li>Replace batteries.</li> <li>The distance between remote control unit and player should be no more than about 7 meters (23 feet). The operational angle against the front panel is within 30° from right or left end of player.</li> <li>Relocate remote control unit or remove obstruction.</li> </ul>

*Abnormal functioning of this unit may be caused by lightning, static electricity, or other external interference. To restore normal operation, turn the power off and then on again, or unplug the AC power cord and then plug it in again.*

# SPECIFICATIONS

## General

Type .....	Compact disc digital audio system
Power requirements	
U.K. and Australian models .....	AC 220-240 V, 50/60 Hz
U.S. and Canadian models .....	AC 120 V, 60 Hz
Other models .....	AC 110-127 V/220-240 V (switchable), 50/60 Hz
Power consumption	
U.K., Australian and other models .....	13 W
U.S. and Canadian models .....	12 W
Operating temperature .....	+5°C~+35°C (+41°F~+95°F)
Weight .....	3.8 kg (8 lb, 6 oz)
External dimensions .....	420 (W) x 299 (D) x 105 (H) mm 16-9/16 (W) x 11-12/16 (D) x 4-1/8 (H) in

## Audio section

Frequency response .....	2 Hz-20 kHz
S/N ratio	
PD-M602(U.K. model)/PD-M702 .....	102 dB or more (EIAJ)
Other models .....	98 dB or more (EIAJ)
Dynamic range .....	96 dB or more (EIAJ)
Harmonic distortion .....	0.003% or less (EIAJ)
Output voltage .....	2.0 V
Wow and flutter .....	Limit of measurement (±0.001% W. PEAK) or less (EIAJ)
Channels .....	2-channel (stereo)

## Output terminal

 
Audio line output  
Headphone jack with volume control (PD-M602/PD-M702 only)  
Control input/output jacks (PD-M502/PD-M552: all models, PD-M602/PD-M702: U.S. and Canadian models only)  
CD-DECK SYNCHRO jack

## Accessories

- Remote control unit (Except for PD-M502).....1
- Size AAA/R03/dry batteries  
(Except for PD-M502).....2
- Six-compact-disc magazine.....1
- Control cord (PD-M502/PD-M552: all models, PD-M602/PD-M702: U.S. and Canadian models only).....1
- Output cord.....1
- Operating instructions.....1

## NOTE:

*Specifications and design subject to possible modification without notice, due to improvements.*

The Magazine Type Multi-Play CD Players with  mark and the Magazines with the same mark are compatible for 5-inch (12 cm) discs.

Published by Pioneer Electronic Corporation.  
Copyright © 1993 Pioneer Electronic Corporation.  
All rights reserved.

## PIONEER ELECTRONIC CORPORATION

4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan

PIONEER ELECTRONICS [USA] INC. 2265 East 220th Street, Long Beach, California 90810, U.S.A.  
P.O. BOX 1720, Long Beach, California 90801, U.S.A.

PIONEER ELECTRONICS OF CANADA, INC. 300 Allstate Parkway Markham, Ontario L3R 0P2, Canada

PIONEER ELECTRONIC [EUROPE] N.V. Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium, TEL: 03/750.05.11

PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia, TEL: [03] 580-9911